

REPAIR PENS

Instructions for use

CONTENT

A box contains 2 pens to achieve the best results for touching up small scratches in your Parky floor:

- 1 pen with pigmented lacquer (pigmented lacquer pen 240) or 1 colour marker (repair pen 210, only for Smoked Walnut PEN19)
- 1 pen with transparent lacquer to protect and restore shine (pigmented lacquer pen 240 - PENSM)

RECOGNISING AND USING THE REPAIR PENS

Colour marker: identified by its coloured felt tip. The tip is flat and has an oblique angle, allowing for both fine and wide lines. The pen is ready to use, no preparation needed. Draw smoothly and without applying pressure. Do not hold the marker still on one spot, as this will create a dark area. Wipe away excess ink immediately with a cloth or finger.

Lacquer pen: this pen has a rounded, uncoloured tip. The lacquer pen is not ready for use; first, lacquer must be pumped into the tip. Start by shaking the pen well (you will hear the mixing ball click). Place the tip of the pen on an old piece of cardboard or plastic and pump by pressing the tip a few times. Then, hold the tip down for about ten seconds and repeat the pumping. Continue until the tip of the pen is saturated with lacquer. First, try drawing a full line on an inconspicuous area or a scrap piece before working on the damaged spot. Press the pen lightly while drawing and try to move smoothly and continuously. Do not wipe! Let it dry for 30 minutes before evaluating the result or making further touch-ups.

HOW TO TOUCH UP?

Before touching up, the damaged area must be cleaned, and any loose fibers must be removed. This can be done with a lint-free cloth.

Step 1: recolouring

The first step is to restore the colour. Scratches leave a white edge and can penetrate through the coating to the underlying wood. Recolouring is done with the colour marker or the pen with pigmented lacquer. When colouring, it is important to work smoothly without holding the marker still on the wood, as this will cause stains. It is advisable to practice on a piece of cardboard or an old piece of parquet first.

When using the colour marker, it can be useful to wipe away excess ink immediately. Be cautious with deep scratches; if you apply too much colour, dark spots may develop in the wood. Try to touch up in several small steps.

Assess the colouring from more than 1 meter away. If satisfied, proceed to the protection step. For lighter scratches, only in the lacquer, recolouring may not always be necessary for a good result.

Step 2: protection

This step is always carried out with a transparent lacquer pen. The goal of this step is to protect the damaged area from dirt and water. The protective layer will also restore the gloss level and make the damage less visible in direct light.

Use the transparent lacquer pen as described above (shake, pump). Apply smoothly over the entire damaged area, including the edges. If there is excess, you can gently remove it with a cloth, but avoid streaks and smudges. Assess after complete drying and make additional touch-ups if needed.

LIFESPAN

The colour marker is infinitely reusable and remains effective for over 5 years, provided that the marker is immediately and carefully closed with the included cap after use.

The lacquer pen has a lifespan of 5 years in unused condition. However, after the first use, the tip will gradually harden and become difficult to use after about a year. The pen should be immediately and carefully closed with the included cap after use.

SAFETY

- Safety data sheets (MSDS) can be consulted or downloaded at www.par-ky.com.
- The markers are made of aluminum with a plastic cap.
- The markers contain solvents and flammable products in very small quantities. They emit a typical odor during use.

Use exclusively for touch-ups on wood.

Keep out of reach of children.

Keep away from heat, hot surfaces, sparks, open flames, and other sources of ignition.

Do not smoke.

Use only in a well-ventilated area.

